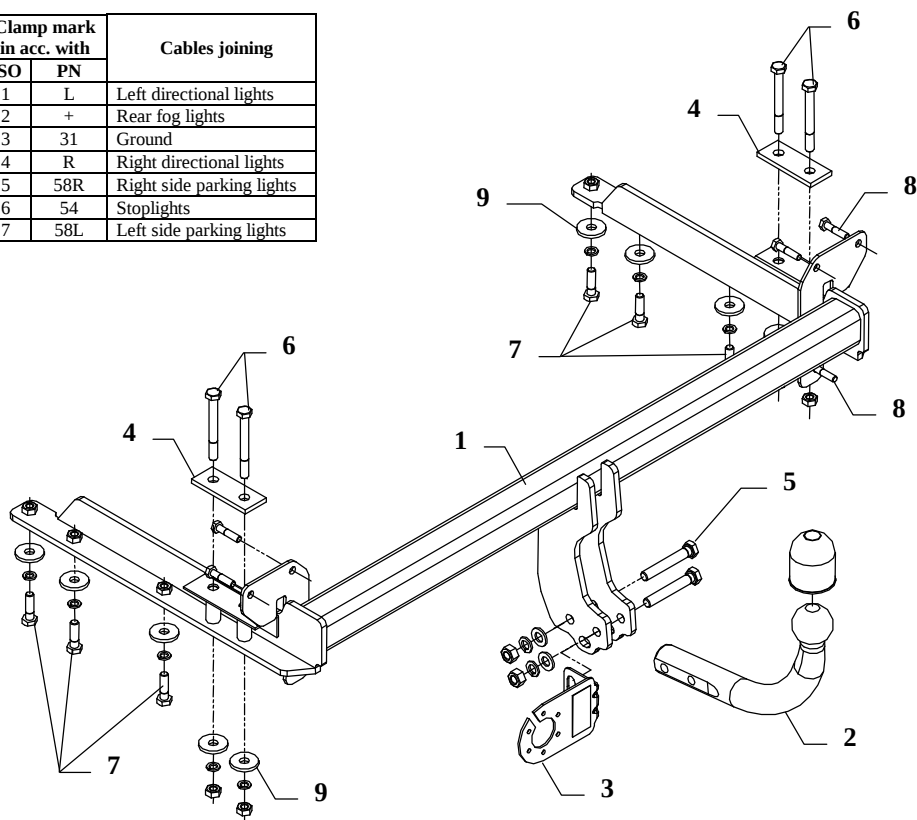


## FITTING INSTRUCTION

| Clamp mark<br>in acc. with |     | Cables joining            |
|----------------------------|-----|---------------------------|
| ISO                        | PN  |                           |
| 1                          | L   | Left directional lights   |
| 2                          | +   | Rear fog lights           |
| 3                          | 31  | Ground                    |
| 4                          | R   | Right directional lights  |
| 5                          | 58R | Right side parking lights |
| 6                          | 54  | Stoplights                |
| 7                          | 58L | Left side parking lights  |



This towbar is designed to assembly in following cars:  
**KIA SEPHIA II, KIA SHUMA II**, produced since 1998 till 04.2001,  
catalogue no. **T06** and is prepared to tow trailers max total weight **1350 kg**  
and max vertical load **50 kg**.

### *From manufacturer*

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

*The towbar should be install in points described by a car producer.*

## The instruction of the assembly

- Unscrew:
  - plastic, side covers in the trunk,
  - the bumper.
 From bumper unscrew plastic „gutter” and handles. Handles not used any more.
- Plastic „gutter” fix to main bar of the towbar (pos. 1) with bolts M8x35mm – pos. 8 (use original nuts).
- So prepared towbar slip to chassis members and screw using bolts from accessories as shown in the drawing.
- Assemble the bumper after cut out fragment 50x20mm in bottom part, fulfillment too.
- Fix tow-ball (pos. 2) and socket plate (pos. 3) using bolts M12x75mm (pos. 5) from accessories.
- Tighten all bolts according to the torque shown in the table.
- Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
- Complete paint layer damaged during installation.

|                                           |                      |
|-------------------------------------------|----------------------|
| Torque settings for nuts and bolts (8,8): |                      |
| <b>M 8</b> - 25 Nm                        | <b>M 10</b> - 55 Nm  |
| <b>M 12</b> - 85 Nm                       | <b>M 14</b> - 135 Nm |

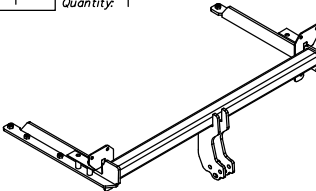




### NOTE

After install the towbar you should get adequate note in registration book (at authorised service station).The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.

## Towbar accessories:

|                                                                                   |                                                   |                                                                                   |                                                       |                                                                                    |                                                        |
|-----------------------------------------------------------------------------------|---------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------|
| Pos.<br>1                                                                         | Name: Main bar<br>Quantity: 1                     | Pos.<br>6                                                                         | Name: Bolt 8,8 B<br>Quantity: 4<br>Dim.: M10x90mm     | Pos.<br>12                                                                         | Name: Spring washer<br>Quantity: 10<br>Dim.: Ø 10,2 mm |
|  |                                                   | Pos.<br>7                                                                         | Name: Bolt 8,8 B<br>Quantity: 6<br>Dim.: M10x35mm     | Pos.<br>13                                                                         | Name: Nut 8 B<br>Quantity: 2<br>Dim.: M12              |
|                                                                                   |                                                   |  |                                                       |  |                                                        |
| Pos.<br>2                                                                         | Name: Tow ball<br>Quantity: 1                     | Pos.<br>8                                                                         | Name: Bolt 8,8 B<br>Quantity: 6<br>Dim.: M8x35mm      | Pos.<br>14                                                                         | Name: Nut 8 B<br>Quantity: 4<br>Dim.: M10              |
|  |                                                   |  |                                                       |  |                                                        |
| Pos.<br>3                                                                         | Name: Socket plate<br>Quantity: 1                 | Pos.<br>9                                                                         | Name: Washer<br>Quantity: 10<br>Dim.: Ø35xØ12x4mm     | Pos.<br>15                                                                         | Name: Ball cover<br>Quantity: 1                        |
|  |                                                   |  |                                                       |  |                                                        |
| Pos.<br>4                                                                         | Name: Plate<br>Quantity: 2                        | Pos.<br>10                                                                        | Name: Plain washer<br>Quantity: 2<br>Dim.: Ø 13 mm    |                                                                                    |                                                        |
|  |                                                   |  |                                                       |                                                                                    |                                                        |
| Pos.<br>5                                                                         | Name: Bolt 8,8 B<br>Quantity: 2<br>Dim.: M12x75mm | Pos.<br>11                                                                        | Name: Spring washer<br>Quantity: 2<br>Dim.: Ø 12,2 mm |                                                                                    |                                                        |
|  |                                                   |  |                                                       |                                                                                    |                                                        |



**PPUH AUTO-HAK S.J.**

Produkcja Haków Holowniczych  
Henryk & Zbigniew Nejman  
76-200 SŁUPSK ul. Słoneczna 16K  
tel/fax (059) 8-414-414; 8-414-413  
email: [office@autohak.com.pl](mailto:office@autohak.com.pl)  
[www.autohak.com.pl](http://www.autohak.com.pl)

## Towing hitch (without electrical set)

Class: A50-X Cat. no. T06

Designed for:

Manufacturer: KIA

Model: SEPHIA II

Type: 4 doors

Model: SHUMA II

Type: 5 doors

both produced since 1998 till 04.2001

Technical data:

maximum D-value: 7,6 kN

maximum trailer weight: 1350 kg

maximum vertical cup load: 50 kg

**Approval number acc. to regulations EKG/ONZ 55.01: E20-55R-01 1402**

## Foreword

This towbar is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving, and values for the towing hitch cannot be exceeded.

*D-value formula:*

$$\frac{\text{Max trailer weight [kg]} \times \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \text{Max vehicle weight [kg]}} \times \frac{9,81}{1000} = D \text{ [kN]}$$